

Touch Panel Accessories Controller Board Interface Cables

- **CABLE/RTP/RS232:** Serial Host Interface Cable for N16B-0558-B230 (4-wire) and N16B-0558-B240 (7-wire)
- **N01L-0536-0005:** Serial Alternate Host Interface Cable for N16B-0558-B230 (4-wire) and N16B-0558-B240 (7-wire)
- **CABLE/RTP/USB:** USB Host Interface Cable for N16B-0558-B230 (4-wire) and N16B-0558-B240 (7-wire)
- **N01L-0536-0006:** USB Alternate Host Interface Cable for N16B-0558-B230 (4-wire) and N16B-0558-B240 (7-wire)

These cables are offered as a convenience to customers prototyping, testing, and small production lot use.

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Components Limited
Gotanda-Chuo Building
3-5, Higashigotanda 2-chome, Shinagawa-ku
Tokyo 141, Japan
Tel: (81-3) 5449-7010
Fax: (81-3) 5449-2626
Email: promothq@ft.ed.fujitsu.com
Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc.
250 E. Caribbean Drive
Sunnyvale, CA 94089 U.S.A.
Tel: (1-408) 745-4900
Fax: (1-408) 745-4970
Email: marcom@fcai.fujitsu.com
Web: www.fcai.fujitsu.com

Europe

Fujitsu Components Europe B.V.
Diamantlaan 25
2132 WV Hoofddorp
Netherlands
Tel: (31-23) 5560910
Fax: (31-23) 5560950
Email: info@fceu.fujitsu.com
Web: www.fceu.fujitsu.com

Asia Pacific

Fujitsu Components Asia Ltd.
102E Pasir Panjang Road
#04-01 Citilink Warehouse Complex
Singapore 118529
Tel: (65) 6375-8560
Fax: (65) 6273-3021
Email: fcal@fcal.fujitsu.com
www.fcal.fujitsu.com