
# **TOUCH PANEL CONTROL BOARD 4-WIRE USB**

# N16B-0558-B730 USB Interface Controller Board Quick Reference

# 4-Wire Resistive Touch Panels



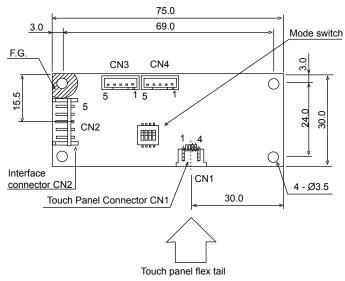

# **■ FEATURES**

- High quality and reliability touch panel control board with integrated switch for selectable cable tail exit direction for FPC cable 4-wire touch panels.
- USB 1.1 bus powered interface for direct connection to PC or alternative USB interfaces.
- · RoHS compliant

# A B #1 #2 #3 #3 #4 Origin (0,0) Point

# ■ SWITCH SETTINGS

SW1 SW2 SW3	Orientation mode selection switches	OFF ON OFF	A	ON OFF OFF	В	OFF OFF ON	- C	ON ON ON	D	Connector Pin Assignment	Туре А
SW1	Orientation mode selection	ON OF F	A	OFF OFF	B	ON ON	- C	OFF ON	D	Connector Pin Assignment #1 Left #2 Top	Туре В
SW3	switches	OFF		ON	200	ON		OF		#3 Right #4 Bottom	

Connector Pin Assignment listed on individual touch panel drawings.

# **USB 4 -Wire Control Board**

### **■** CONSTRUCTION

Specification Item		N16B-0558-B730 4-Wire USB Control Board				
Mechanical	Size / Weight	75mm x 30mm / 30 g				
	Supply Voltage (max./min.)	Vcc 5.5V/4.1 V				
Electrical	Operating current (detect)	36 mA at Vcc = 5V and T = 25 degrees				
	Sleep Mode current	6 mA at Vcc = 5V and T = 25 degree s				
	Operating Temperature	-5°C to +60°C				
Environment	Storage Temperature	-30°C to +70°C				
	Humidity	20%RH to 85% RH at +38° C maximum wet bulb temperature				

# ■ TOUCH PANEL CONNECTION CN1 (FCI: SFW4R-1STAE1-LF)

# ■ INTERFACE CONNECTION CN2 (JST #: S5B-EH (LF))

1.	+5V (Vcc)	3.	D-(Signal)	5.	Frame Ground
2.	D+ (Signal)	4.	Ground		

Complete specification document is available on request for customers with whom we have an approved NDA in place.

# **Fujitsu Components International Headquarter Offices**

Japan

Fujitsu Component Limited Gotanda-Chuo Building

3-5, Higashigotanda 2-chome, Shinagawa-ku

Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626

Email: promothq@ft.ed.fujitsu.com

Web: www.fcl.fujitsu.com

North and South America

Fax: (1-408) 745-4970

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900

Email: components@us.fujitsu.com

Web: http://www.fujitsu.com/us/services/edevices/components/

Europe

Fujitsu Components Europe B.V.

Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com Web: emea.fujitsu.com/components/

Asia Pacific

Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex Singapore, 118529

Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com

Web: http://www.fujitsu.com/sg/services/micro/components/

©2006 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice.

Rev. May19/2006