


TOUCH PANEL CONTROL BOARD 7-WIRE SERIAL

N16B-0558-B240 Serial Interface Controller Board Quick Reference

7-Wire Resistive Touch Panels



 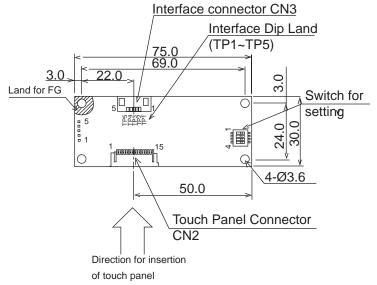


■ FEATURES

- High quality and reliability touch panel control board with switch selectable cable tail exit direction.
- RS232C Interface for direct connection to PC serial interfaces.
- Used to control the 7-wire resistive touch panels (in PnP or non-PnP mode).

■ SWITCH SETTINGS

= OWITCH CETTINGS										
SW1	Orientation	ON		OFF		ON	_	OFF	3	
SW2	mode selection	ON	A	ON	B	OFF	- C	OFF	D	
SW3	switches	ON		OFF	See See	OFF		ON		



■ CONSTRUCTION

Specification	Item	N16B-0558-B240 7-Wire Serial Control Board		
Mechanical	Size / Weight	75mm x 30mm / 30g		
	Supply voltage(max./min.)	Vcc 5.5V at Vss=6V/Vcc is 4.5V at Vss=0.3V		
Electrical	Operating current (detect)	57 mA at Vcc = 5V and T = 25 degrees		
	Sleep Mode current1	16 mA at Vcc = 5V and T = 25 degrees		
	Operating Temperature	-5° C to +60° C		
Environment	Storage Temperature	-30° C to +70° C		
	Humidity	20%RH to 85% RH at +38° C maximum wet bulb temperature		

1

Serial 7-Wire Control Board

■ INTERFACE CONNECTION CN3 (JST #: S5B EH)

		-B230	Host
1.	+5V (Vcc)	1+5V	+5V
2.	Transmit data	2 TXD	RXD
3.	Receive data	3 RXD	TXD
4.		4 CTS	RTS*
5.	Ground	5 Gnd	Gnd

^{*} optional: used for plug-n-play detection

Complete specification document is available on request for customers with whom we have an approved NDA in place.

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Component Limited Gotanda-Chuo Building 3-5, Higashigotanda 2-chome, Shinagawa-ku Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626

Email: promothq@ft.ed.fujitsu.com Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900 Fax: (1-408) 745-4970 Email: marcom@fcai.fujitsu.com Web: www.fcai.fujitsu.com

Europe

Fujitsu Components Europe B.V. Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com

Web: www.fceu.fujitsu.com

Asia Pacific

www.fcal.fujitsu.com

Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #04-01 Citilink Warehouse Complex Singapore 118529 Tel: (65) 375-8560 Fax: (65) 273-3021 Email: fcal@fcal.fujitsu.com

© 2004 Fujitsu Components America, Inc. All company and product names are trademarks or registered trademarks of their respective owners. Rev. 07/27/2004.